 



Operations

How to handle an iPod

To set an iPod

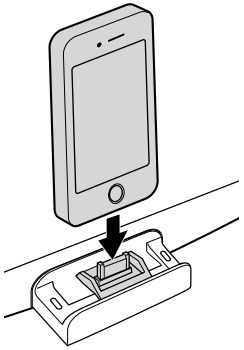

 To remove an iPod

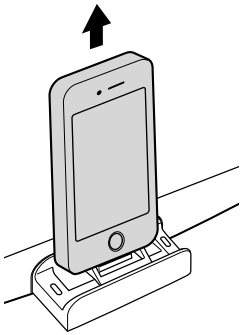

Notes

- An iPod in a case or cover can be set in this unit. However, if the case or cover interferes with the connection, remove the case or cover before setting the iPod on the Dock Connector.
- When placing or removing the iPod, hold it at the same angle as the Dock Connector on the unit. Do not pull the iPod forward too far.
- When placing or removing the iPod, hold the unit securely.
- Do not twist or bend the iPod, as this may result in connector damage.
- Remove the iPod when transporting it; otherwise, a malfunction may result.

- If the iPod does not reach the supporter on the front of the unit, attach the supplied cushion below the supporter.

To turn the unit on/off

Press **I/⏻** (On/Standby).
The power indicator lights up when the unit is turned on.

Adjusting the volume

Press **VOLUME +/-** (**VOL +/-** on the remote).

Operating an iPod on the Dock

- 1 Press the Docking Tray on the front of the unit to open.
After use, close the Docking Tray by pushing it until locked.

- 2 Set the iPod on the Dock Connector.
The Dock Connector can be tilted slightly.
For details, see “How to handle an iPod.”
- 3 Press **I/⏻**.
- 4 Press **iPod** to activate the function for iPod.
“iPod” appears in the display.



- 5 Press **▶II**.
The iPod begins to play back.
If the iPod does not start playing back, operate directly on the iPod.
You can operate the connected iPod via this unit or the iPod itself.

To	Press
Pause playback	II To resume play, press again.
Go to the next track	▶▶ (forward)
Go back to the previous track	◀◀ (backward)*
Locate a point while listening to the sound	▶▶ (forward) or ◀◀ (backward) while playing and hold until you find the desired point.
Go back to the previous menu	MENU on the remote
Select a menu item or a track for playback	⬆ (up)/ ⬇ (down) on the remote
Execute the selected menu item	ENTER on the remote or begin playback

* During playback, this operation returns you to the beginning of the current track. To go back to the previous track, press twice.

Notes

- If a pop-up message appears on the display of the iPod touch, iPhone, or iPad, see “About App.”
- Some operations may differ or may not be available on some models of iPod.
- If the battery of the iPod is extremely low, charge it for a while before operation.
- Sony cannot accept responsibility in the event that data recorded to an iPod is lost or damaged when using the iPod connected to this unit.
- For details of environmental conditions for operating an iPod, check the website of Apple Inc.

To remove the iPod

For details, see “How to handle an iPod.”

To charge an iPod

 
You can use the unit as a battery charger for an iPod when the power is supplied by the AC adaptor. Charging begins when the iPod is connected to the unit. The charging status appears in the display on the iPod. For details, refer to the user's guide of the iPod.

Tips for charging an iPod with the rechargeable battery

- With the function for iPod activated, if the battery indicator is level 1 or 2, charging will start. If the battery indicator is level 3 or 4, to start charging, press and hold **iPod**. (For details, see “To use the rechargeable battery.”)
- Charging will terminate when the unit turns off automatically. (For details, see “Auto power off.”)
- To terminate charging, press and hold **iPod**. This operation will terminate playback. To restart charging, press and hold **iPod** again.

Operating by wireless music streaming

By using the Bluetooth connection, you can listen to the sound from an iPod or other Bluetooth device with the unit wirelessly.

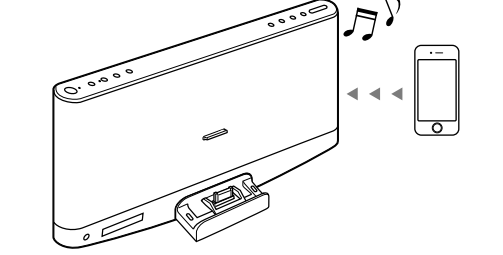

Pairing

What is pairing?


Bluetooth devices need to be “paired” with each other beforehand.
Once Bluetooth devices are paired, there is no need for pairing again, unless pairing information is deleted.

Status	Bluetooth indicator (blue)
Bluetooth off	Off
Bluetooth on but not connected	Flashes slowly
Pairing mode	Flashes quickly
Connected or communicating	Lights up

To pair with an iPod

Keep the iPod and the unit within 1 meter of each other for this operation.

 
- 1 Press **I/⏻**.
- 2 Press **BLUETOOTH** (Ⓔ) on the remote) to turn on the Bluetooth function when the Bluetooth indicator is off.
“Bluetooth” appears in the display.
- 3 Press and hold **BLUETOOTH** (Ⓔ) on the remote).
When pairing starts, a double-beep sound will be heard and the Bluetooth indicator will flash quickly.
Pairing mode of the unit is activated.

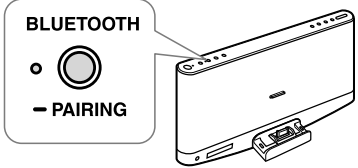

- 4 Perform the pairing procedure on the iPod to detect the unit. Select “Settings” > General > Bluetooth” and turn on the Bluetooth function.
Example: iPhone 4S



 - A list of detected devices appears on the display. The unit is displayed as “RDP-XF300iP”
If “RDP-XF300iP” is not displayed, repeat from step **3**.
5 Select “RDP-XF300iP” on the display of the iPod while the Bluetooth indicator flashes quickly.
When “Connected” appears on the display of the iPod, pairing and connection are complete.
Example: iPhone 4S

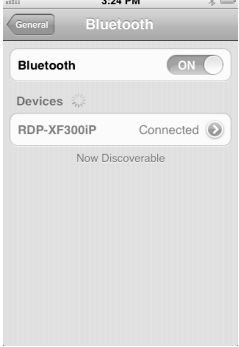

Notes

- The operation and display may differ depending on the model of iPod and/or software version. For details, refer to the user's guide of the iPod.
- Pairing mode is canceled after about 5 minutes. If pairing mode is canceled halfway, start over from step **3**.
- If pairing is not complete, start over from step **3**.
- To pair with another iPod, repeat steps **1** to **5**.
- In step **3**, if a double-beep sound is not heard or the Bluetooth indicator does not flash quickly, press and hold **BLUETOOTH** (Ⓔ) on the remote) again.
- If you turn off the unit or the iPod before the Bluetooth connection is complete, pairing information will not be memorized, and pairing will not be completed.

Notes on pairing with a Bluetooth device other than iPod

- When pairing with a Bluetooth device other than iPod, after step **3**, pass code input may be required in your Bluetooth device. In this case, input “0000.”
- The operation and display may differ depending on the Bluetooth device and/or software version. For details, refer to the user's guide of the Bluetooth device.

To listen to sound

Keep the iPod and the unit within 10 meters of each other for this operation.

Check the following before operating the unit.

- The Bluetooth function of the iPod is on.
 - Pairing of the unit and the iPod is complete. If pairing is not completed, perform pairing again. (See “To pair with an iPod.”)
- 1 Press **I/⏻**.
 - 2 Press **BLUETOOTH** (Ⓔ) on the remote) to turn on the Bluetooth function.
The last connected iPod will be reconnected automatically when the Bluetooth function is turned on.
 - 3 Select your desired music, video, game, etc., to play on the iPod. For details, refer to the user's guide of the iPod.

Tips

- If the last connected iPod does not reconnect automatically, press **BLUETOOTH** (Ⓔ) on the remote). If it still does not reconnect, select the model name of this unit from the iPod. (Perform steps **4** to **5** in “To pair with an iPod.”)
- To connect an alternative iPod, which has previously been paired with this unit, press **BLUETOOTH** (Ⓔ) on the remote) to disconnect the currently connected iPod. Then select the model name of the unit from the alternative iPod you want to connect.
- While listening to music from an iPod via Bluetooth connection, you can charge the iPod on the Dock only if the AC adaptor is connected.
- If the volume level is low, adjust the volume of the unit first. If the volume is still too low, adjust the volume of the Bluetooth device.

To finish listening

Terminate the Bluetooth connection by any of the following operations.

- Turn off the unit.
- Turn off the iPod.
- Press **BLUETOOTH** (Ⓔ) on the remote), **iPod**, **FM** or **AUDIO IN**.
- Operate the iPod to terminate the connection. For details, refer to the user's guide of the iPod.

To clear the list of models already-paired and memorized in the unit

- 1 Press **I/⏻**.
- 2 Press **BLUETOOTH** (Ⓔ) on the remote) to turn on the Bluetooth function.

- 3 Press and hold **BLUETOOTH** and **VOLUME –** at the same time on the unit.
“CLEAR” appears in the display.

Notes

- You can perform step **3** to clear the list even during Bluetooth connection.
- This operation cannot be performed when the unit is pairing.
- To pair with this unit again, delete the model name of this unit from the iPod and perform pairing again. (See “To pair with an iPod.”)

Operating the radio

- 1 Press **I/⏻**.
- 2 Press **FM** to activate the radio function.
“FM” appears in the display.



Frequency digits appear in the display after a short period.

- 3 Press and hold **FM** until “FREQ. TUNE” appears in the display.
If “PRESET TUNE” appears, press and hold **FM** again.
When using the remote to operate the unit, you can skip this step, and directly operate step **4**.
- 4 Press and hold **TUNE +** or **–** until the frequency digits begin to change in the display.
The unit automatically scans the radio frequencies and stops when it finds a clear station.
If you cannot tune in a station, press **TUNE +** or **–** repeatedly to change the frequency step-by-step.
When an FM stereo broadcast is received, “STEREO” appears.

 


Tips

- If you touch or operate an iPod connected to this unit while listening to the radio, noise may occur. Avoid touching or operating the iPod in this case.
- If you are listening to the radio with an iPhone connected to the unit, interference with radio reception may occur. Remove the iPhone in this case.

To improve the reception

Extend the aerial to its full length and adjust the angle for best reception.

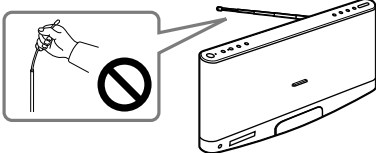

Note

- Adjust the direction of the aerial by holding the bottom of it. The aerial can be damaged if you move the aerial with excessive force.

To set monaural sound if stereo reception is poor

The unit automatically switches between stereo and monaural output, depending on reception conditions. However, if stereo reception is unstable, you can manually set for monaural output to improve the sound.
Press **FM** to show “MONO” in the display. (To resume stereo reception, press **FM** again to show “STEREO” in the display.)

To preset radio stations

You can preset up to 20 radio stations in the unit's memory.

- 1 Press **FM** to activate the radio function.
- 2 Press and hold **▶II** until “AUTO PRESET” appears in the display.



- 3 Press **▶II**.
The stations are stored in memory from the lower frequencies to the higher ones automatically.

Tip

- To go back to the previous status, press **FM** instead of **▶II** in step **3**.

If a station cannot be preset automatically

You may need to preset a station with a weak signal manually.

- 1 Tune in the station you want.
- 2 Press **▶II**.



- 3 Press **◀◀** or **▶▶** to select the desired preset number, and press **▶II**.
The preset number flashes, then, the frequency digits show in the display.
The new station replaces the old one.

Tip

- To go back to the previous status, press **FM** instead of **▶II** in step **3**.

To play preset radio stations

Press **◀◀** or **▶▶** to tune in a stored station.
If “FREQ. TUNE” appears, press and hold **FM** again.



Connecting optional components

You can enjoy the sound from an optional component, such as a portable digital music player, through the speakers of this unit. Be sure to turn off the power of each component before making any connections.

- 1 Firmly connect the line output jack of the portable digital music player (or other component) to the **AUDIO IN** jack on the back of the unit, using a suitable audio connecting cable (not supplied).
- 2 Press **I/⏻** to turn on the unit.
- 3 Press **AUDIO IN** to activate the Audio-in function.
“AUDIO IN” appears in the display.
- 4 Turn the connected component on.
- 5 Play the connected component.
The sound from the connected component is output from the speakers of this unit.

Notes

- The necessary type of audio connecting cable depends on the optional component. Be sure to use the correct type of cable.
- If the volume level is low, adjust the volume of the unit first. If the volume is still too low, adjust the volume of the connected component.

Other useful functions

Power Off Hold function

You can set the Power Off Hold function to avoid unintentionally powering on while carrying the unit.

To set the Power Off Hold function

Remove the iPod from the Dock Connector, and then press and hold **I/⏻** on the unit when the AC adaptor is disconnected.

“HOLD” flashes twice and the display turns off. The unit cannot be turned on by pressing **I/⏻** while the Power Off Hold function is set.

To cancel the Power Off Hold function

Press and hold **I/⏻** on the unit.
“RELEASE” flashes twice and the Power Off Hold function is canceled. The unit will turn on automatically.

Tip

- The Power Off Hold function will be canceled if you connect the AC adaptor to the unit or set an iPod on the Dock Connector.

Selecting audio emphasis (equalization)

You can adjust the emphasis of the sound.
Press **SOUND** repeatedly to select the desired audio emphasis.



About App

A dedicated Dock App for iPod touch/iPhone/iPad available at Apple App Store.
Search for “D-Sappli” and download the free App to find out more about the functions.

Features

- D-Sappli includes various timer functions: Alarm, Music Play Timer and Sleep Timer.
- You can set up to 10 alarms, using songs in iPod or Preset Sound in D-Sappli for the alarm sound. Music Play Timer allows you to play/pause desired music at a desired time. Sleep Timer allows you to specify a time at which to stop music playback. Alarm, Music Play Timer and Sleep Timer work in combination with the power supply of the unit. Alarm, Music Play Timer and Sleep Timer are available only when D-Sappli is activated.